


COBY®

CV-R80

Hands-free Earphone/Mic with Digital Voice Recorder

INSTRUCTION MANUAL

- 1.Earphone plug
- 2.Battery compartment
- 3.Earphone
- 4.Rec/Play switch
- 5.Start/pause
- 6.Stop/reset
- 7.Indicator light
- 8.Volume High/Low switch
- 9.Built-in microphone

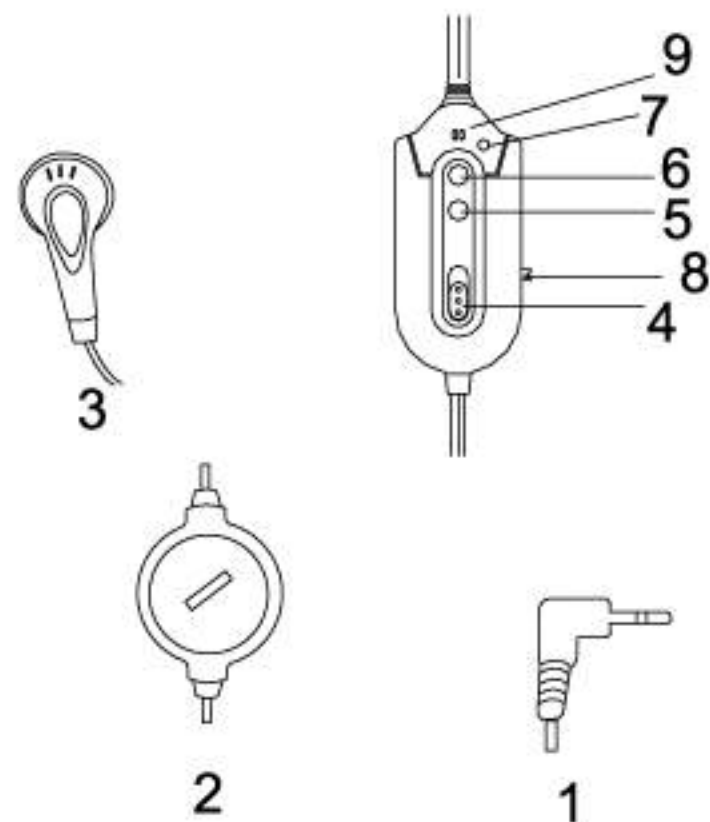

CV-R80 allows you to record conversations over cellular and cordless phones (some products may not be applied) as well as voice memo up to 64".


- To record conversations over cellular and cordless phones, connect the plug to the earphone jack in a cellular or cordless phone.
- To record normal speech, simply talk to the microphone.

Operations

Battery installation: CV-R80 requires two 3V CR2016 lithium batteries;

1.Unlock and open the battery Battery compartment door;

2.Insert two batteries with the '+' facing up under a clip in the Battery compartment to hold the battery tight;(two lithium batteries)

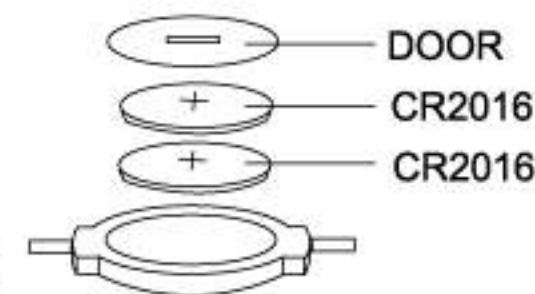

3.Lock the door by rotating in the direction indicated;

The power is low when the light turns weak, and batteries are required to replace.

Recording:

- 1.Slide the REC/PLAY switch to Record position;
- 2.Press START/PAUSE button and the light is on, recording starts;
- 3.Press STOP/RESET or START/PAUSE button to stop recording. (pls refer to REMINDER below)

Note:

- 1.For recording over 64 seconds: memory will be full in 64 seconds' time and the recording stops automatically; New recording over-starts again from the beginning and erases the old messages.

- 2.For recording less than 64 seconds: more messages can be recorded until remaining memory is full, and recording stops automatically.
- 3.Memory retains when batteries are removed.

Playback:

- 1.Slide the REC/PLAY switch to Playback position;
- 2.Press START/PAUSE button, and the light is on, playback starts;
- 3.Press STOP/RESET button to stop playback, Or press START/PAUSE button to pause playback. (pls refer to REMINDER below)

Playback automatically stops when one message finishes.

Reminder:

- 1.Press STOP/RESET in Record or Playback mode, restarting recording or resume playback will always be at the very beginning of the whole section;
- 2.Press START/PAUSE in Record or Playback mode, restarting recording or resume playback will always be at where the last message is recorded or played;
- 3.New message recorded will always erase the old memory.

Volume High/Low Switch

Switch to high / low position to control record or playback volume.

COBY®

90 DAY LIMITED WARRANTY

COBY ELECTRONICS CORP.(COBY) warrants this product to the original purchaser to be free from defects in material or workmanship under normal use for 90 DAYS from the date of original purchase. COBY agrees at our option under this warranty, to repair or replace it with a new or reconditioned product at no additional charge. Our warranty,of course does not cover any product which has been subject to neglect, unreasonable use, accident, violation of operating instruction or any product that has been repaired or modified by an unauthorized service agent.

To obtain factory service, return this unit freight-prepaid to the address shown below within the duration of this warranty. Enclose \$6.00 for each item in the form of money order made payable to COBY ELECTRONICS CORP. to cover the cost of shipping and handling. Also, include a copy of the sales receipt to show proof of purchase and a detailed description of the problem. The unit(s) must be packaged in such a way as to reasonably protect it from possible shipping damage. For further information write to:

COBY ELECTRONICS CORP.
Customer Service Dept.
56-65 Rust Street
Maspeth, N.Y. 11378

COBY's liability under any legal theory for any loss damage in any way related to this product shall not exceed the sales price of this product. In no event shall COBY be liable for any incidental or consequential damages resulting from the use of this product, or inability to use this product. Repair or replacement as provided under this warranty is the exclusive right of the consumer.

Except to the extent prohibited by law, no express or implied warranty of merchant ability or fitness for a particular purpose on this product shall be extended beyond the period of this warranty. Some States prohibit the exclusion or limitation of incidental or consequential damages, so that the above limitation or exclusion may not apply to you. This warranty gives you specific rights, and you may also have other rights which may vary from State to State.